

Rare problem found in supply units 7506531 and 7506532

In some rare cases, after the installation of fuel supply units 7506531 and 7506532 the fuel is not pumped even though the pump is running. This can be caused to the fact that the one way valve, that is located in the suction tube, is blocked.

This may occur in cases of long storage periods, after which the valve plate dries and gets stuck to its seat.

The solution is to unblock the plate (please see the directions below). After the one way valve is unblocked and the supply unit is placed in the tank, the problem will not occur again, as the fuel will now provide the necessary lubrication.

Below is a guide on how to lubricate the plate:

1. Remove the fuel filter



2. Remove the one way valve



3. The one way valve as it appears dismantled



4. Lubricate the valve plate



5. Reassemble the valve inside the filter



6. Reinstall the fuel filter

