




Mounting instructions of fuel module 7506413 (Design Marwal)

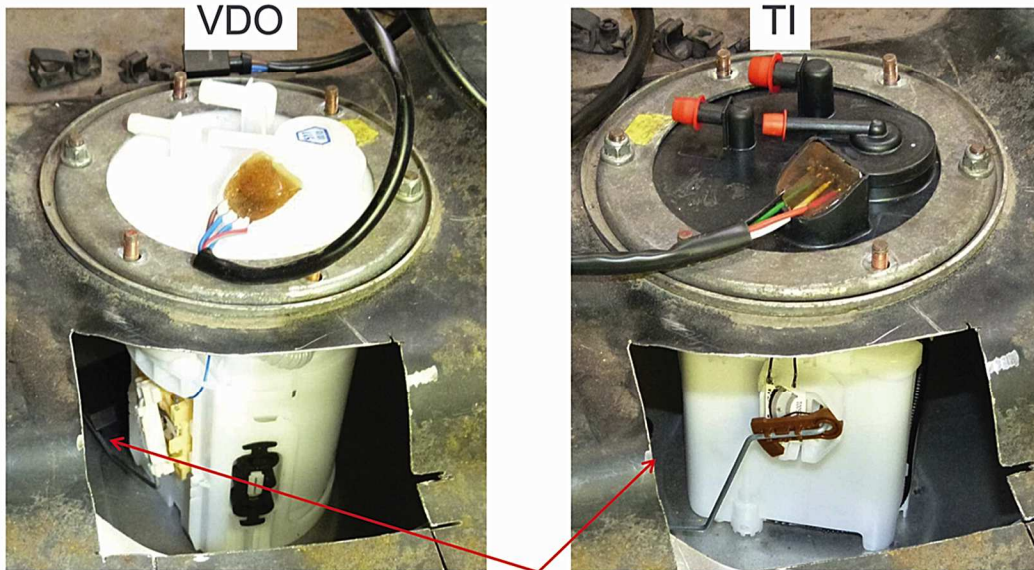


Orientation of the level sender is not exactly the same but they both are on the bump border at bottom position.

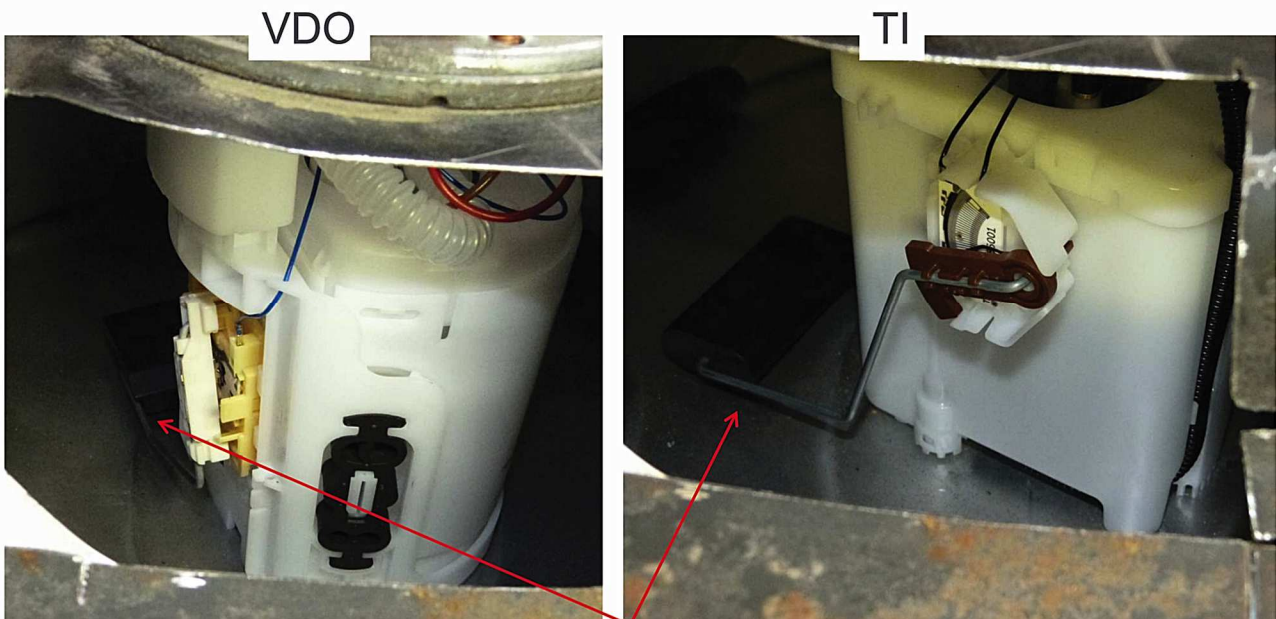

Mounting instructions of fuel module 7506413 (Design Marwal)

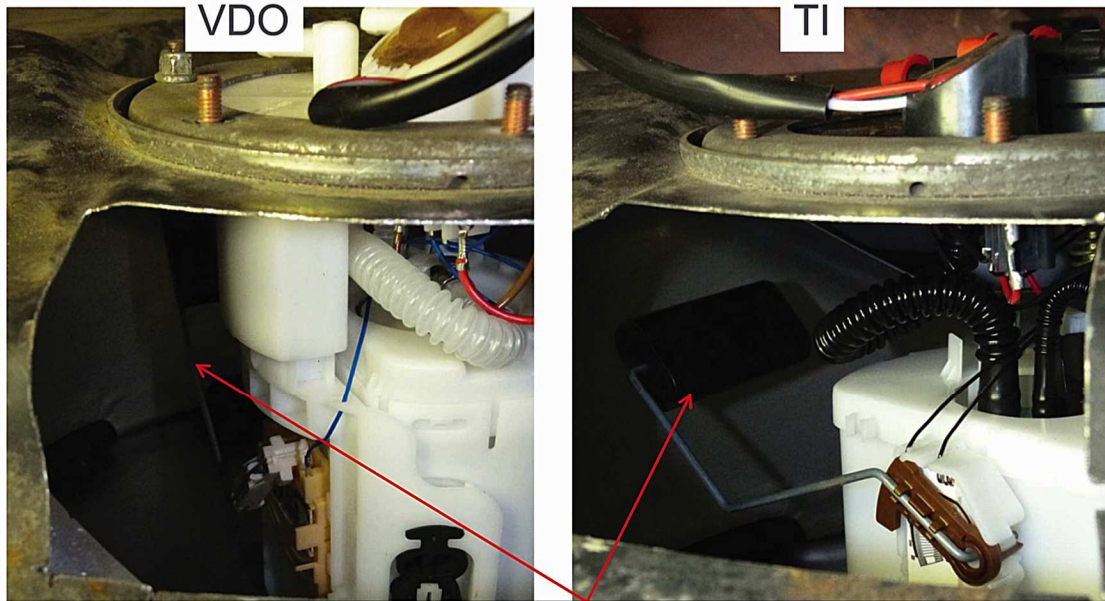

There is no interference with the fuel tank from the empty up to the full level.

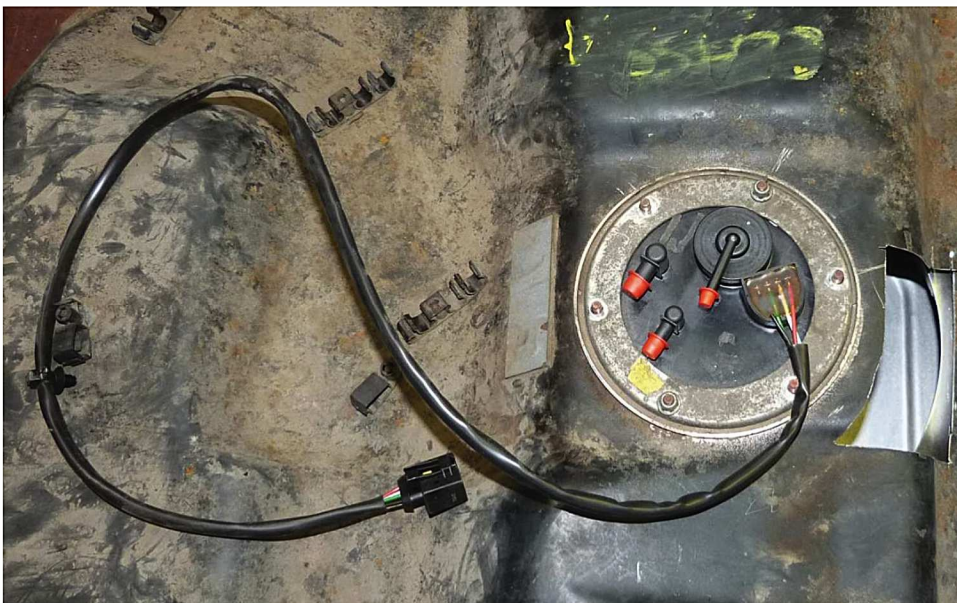

Since there is no marking on the fuel tank, wrong orientation of the fuel level sender could be the cause of a defect.